

183mm

188mm

CHROMATIC \ GUITAR \ BASS TUNER

AT-300B

OWNER' S MANUAL

Thank you for purchasing the Aroma CHROMATIC \ GUITAR \ BASS TUNER AT-300B.

AROMA Aroma Music Co., Ltd.
Bao'an District, Shenzhen City, Guangdong, P.R.China

© 2009 Aroma Music Co., Ltd.

www.aromamusic.cn

Precautions

Location

Using the unit in the following locations are result in a malfunction.

- In direct sunlight
- Location of extreme temperature or humidity
- Excessively dusty or dirty locations
- Locations of excessive vibration
- Close to magnetic fields

Power Supply

Be sure to turn the power OFF when the unit is not in use. Remove the battery in order to prevent it from leaking when the unit is not in use for extended periods.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Handling

To avoid breakage, do not apply excessive force to the switches or controls.

Care

If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners such as benzene or thinner, or cleaning compounds of flammable polishes.


Keep this manual

After reading this manual, please keep it for later reference.

Keeping foreign matter out of your equipment

Never set any container with liquid in it near this equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock. Be careful not to let metal objects get into the equipment.

Controls and functions

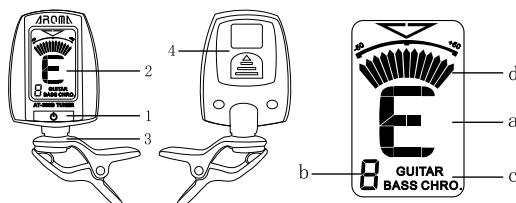

1. Power button (press and hold 2 seconds) & Tuning items switch
2. Display: a. Note name (Chromatic \ Guitar \ Bass) b. String number (Guitar \ Bass) c. Tuning item d. Meter
3. Clip
4. Battery Compartment

Specifications

Tuning item	: Chromatic 12 note, Guitar (6 - string, 7 - string), Bass (4 - string, 5 - string, 6 - string)
Detection range	: A0 (27.5Hz) - C8 (4186.00Hz)
Tuning way	: Clip (tune by vibration)
Detection accuracy	: ± 0.5 cent
Power supply	: one 2032 coin battery
Dimensions	: 45.8mm $\times$ 35.8mm $\times$ 13.8mm
Weight	: 24g
Included items	: Owner's Manual, one 2032 coin battery

Tuning procedure

1. Clip tuning.
Clip the tuner onto your instrument.
2. Turn ON / OFF
Press the power button and hold 2 seconds to turn on (off) the tuner.
3. Select tuning item
Press the power button continuously to select tuning item out of Chromatic, Guitar, and Bass.
 - * In Chromatic mode, the display shows the note name.
 - * In Guitar and Bass mode, the display shows the string number and the note name.
4. Play a single note on your instrument, the note name or string number will appear in the display. The backlight will change. And the meter moves.
Backlight turns green; and meter stands in the middle: in tune
Backlight is white; and meter points left: flat note
Backlight is white; and meter points right: sharp note

Power saving function

If there is no signal inputs in 3 minutes after the power is on, the tuner will turn off automatically.

Installing the battery

Pressing on the cover as marked in the back of the product, open the case, insert a 2032 button battery being careful to observe the correct polarity. Battery life may differ according to the conditions of use. If the unit malfunctions, and turning the power OFF and then ON does not resolve the problem, remove and then reinstall the battery.

成品尺寸: 183*188mm