

COLOUR-SCREEN CHROMATIC TUNER

AT-200C OWNER'S MANUAL

Thank you for purchasing the Aroma CHROMATIC TUNER AT-200C for electric & acoustic guitars, mandolins, basses, banjos and more...




Aroma Music Co., Ltd.

© 2011 Aroma Music Co., Ltd.

Precautions

- Avoid use in direct sunlight, extreme temperature or humidity, excessive dust, dirt or vibration or close to magnetic fields.
- Be sure to power off the unit when not in use and remove the battery for extended periods of inactivity.
- Radios and televisions placed nearby may experience reception interference.
- To avoid damage, do not apply excessive force to the switches or controls.
- For cleaning, wipe with a clean, dry cloth. Do not use flammable liquid cleaners such as benzene or thinner.
- To avoid damage fire, or electrical shock, do not place liquids near this equipment.

Controls and functions

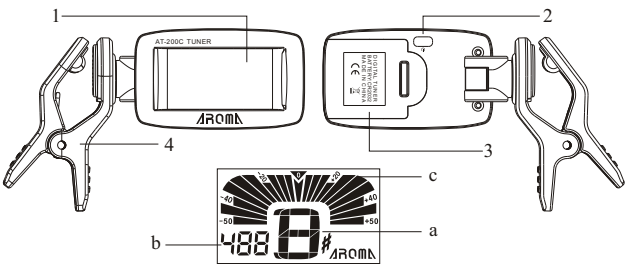

1. Display: a. Note name
b. Pitch
c. Meter
2. Power (press and hold 2 seconds) & Pitch
3. Battery Compartment
4. Clip

Specifications

Tuning item	:Chromatic for electric & acoustic guitars, mandolins, basses, banjos and more
Pitch range	:435Hz - 445Hz
Detection range	:A0 (27.5Hz)—C8 (4186.00Hz)
Tuning way	: Clip (tune by vibration)
Detection accuracy	: ± 0.5 cent
Power supply	: one 2032 coin battery
Dimensions	: 80mm×48mm×27mm
Weight	: 23g
Included items	: Owner's Manual, one 2032 coin battery

Tuning procedure

1. Press the power button and hold 2 seconds to turn on (off) the tuner.
2. Press the power button continuously to select pitch. The pitch ranges from 435Hz to 445Hz. We often use 440Hz only for most of instruments.
3. Clip the tuner onto your instrument.
4. Play a single note on your instrument, the note name will appear in the display and the meter moves.
The left yellow meters appear: flat note
The center green meter appears: note in tune
The right red meters appear: sharp note

Power saving function

If there is no signal inputs in 3 minutes after the power is on, the tuner will turn off automatically.

Installing the battery

Pressing on the cover as marked in the back of the product, open the case, insert a CR2032 coin battery being careful to observe the correct polarity. Battery life may differ according to the conditions of use. If the unit malfunctions, and turning the power OFF and then ON does not resolve the problem, please remove and wait for 3 minutes to reinstall the battery.