

METRONOME

AM-703

OWNER'S MANUAL

AROMA

Aroma Music Co., Ltd.

Bao'an District, Shenzhen City, Guangdong, P.R.China

© 2009 Aroma Music Co., Ltd.

www.aromamusic.cn

Precautions

Location

Using the unit in the following locations will result in a malfunction.

- In direct sunlight
- Location of extreme temperature or humidity
- Excessively dusty or dirty locations
- Locations of excessive vibration
- Close to magnetic fields

Power Supply

Be sure to turn the power OFF when the unit is not in use. Remove the battery in order to prevent it from leaking when the unit is not in use for extended periods.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Handling

To avoid breakage, do not apply excessive force to the switches or controls.

Care

If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners such as benzene or thinner, or cleaning compounds of flammable polishes.


Keep this manual

After reading this manual, please keep it for later reference.

Keeping foreign matter out of your equipment

Never set any container with liquid near this equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock. Be careful not to let metal objects get into the equipment.

Controls and functions

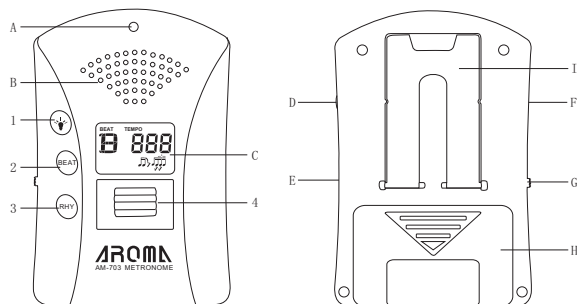

Button No.	Function
1	Backlight
2	Beat
3	Rhythm
4	Tempo / Start (Pause)

- A. LED light
- B. Speaker
- C. Screen
- D. Volume Controller
- E. Earphone Jack
- F. Power Connector (AC-DC adaptor, 9V)
- G. Power ON/OFF Switch
- H. Battery Compartment
- I. Shelf

Specifications

Tempo range: 40-208bpm

Beats: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9

Rhythm: ♩, ♪, ♪♩, ♪♩, ♪♩, ♪♩, ♪♩, ♪♩, ♪♩

Power: 6F22 battery / AC-DC adaptor, 9V

Dimensions: 71mm (L)×106mm (W)×28mm (H)

Weight:112g


Included items: Owner's manual; 6F22 battery, 1 piece

- Tempo, Beat, Rhythm are remembered even when the power is turned off. However, these settings will be initialized if the battery is replaced.
- Default settings: Tempo=120: Beat=4, Rhythm=♪

Connect battery

The battery is placed in the battery compartment without connecting to the power lines. Please open the battery compartment, and take out the battery, then connect the battery to the related power lines.

Using the metronome

1. Turn the power switch to ON position.
2. Select beat. Press button 2. The beat options are 0, 1, 2, 3, 4, 5, 6, 7, 8, 9.
3. Select tempo. Scroll the wheel in the center upwards or downwards to set the tempo. The tempo ranges from 30bpm to 208bpm.
4. Select rhythm. Press button 3. The rhythm options are .
5. Press down button 4 (Scroll) to start metronome.
6. If you want to turn off the screen back light, please press button 1.
7. To pause the metronome, press down the scroll again. If the metronome is not in use for a period, please turn the power OFF.

Connectors

1. Connect to AC-DC Adaptor
If you want not to use batteries for power, you can also connect this machine to an AC-DC adaptor. The voltage requires 9V. Please pay much attention to the polarity when connecting.
2. Connect to an earphone line
If you want to use an earphone line, please put it into the earphone jack of this machine. The earphone jack is only a solo output. You can turn the volume controller to control the volume.